ご使用方法 （時計により外観が異なりますが、操作方法は同じです。）

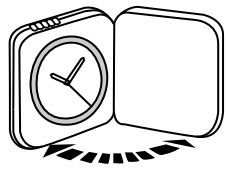

1.電池を入れる

A.時計裏面の電池ホルダー①をＯＰＥＮ➡の方向へ引いて、はずしてください。
B.絶縁紙②をはずし、電池の側面を持って⊕側を上にして入れ直してください。
C.電池ホルダー①を入れ、カチッと音がするまで、しっかりと押し込んでください。時計が動き始めます。

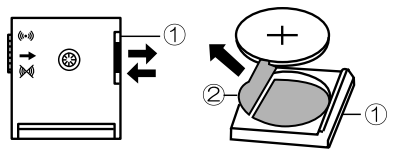

●コイン型リチウム電池に触れるときは、電池の側面を持ってください。
電池の⊕⊖面を同時に、素手や金属製ピンセットでは持たないでください。電池が使えなくなる原因になります。

2.時刻を合わせる

針回し③を指先で押しながらまわし、針を合わせてください。

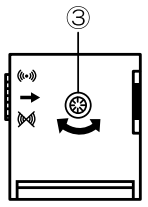

3.アラーム時刻をセットする

前面リング④を↶方向(反時計回りの方向)に回して、アラームマーク⑤をめもりに合わせてください。

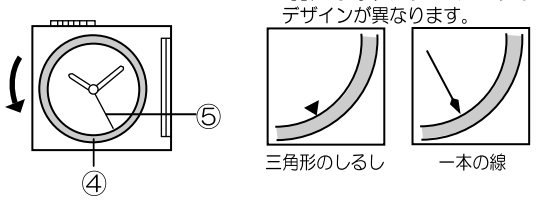

前面リングを時計回りの方向に回すと故障の原因になったり、指定時刻より早く鳴り出すことがあります。

4.アラームを鳴らす／アラームを止める

アラームを鳴らす

スヌーズボタン⑥を (((•))) に合わせてください。指定時刻にアラームが鳴りだします。

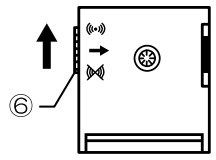

●機械の構造上、アラームは合わせた時刻の10分前から５分過ぎの間に鳴りだします。
（例えば、７時に合わせたときは６時50分から７時５分の間に鳴りだします。）

アラームを止める

アラームを止めるときは、２通りの方法があります。

A. 約５分後に再び鳴らしたいとき
スヌーズボタン⑥を➡ＳＮＯＯＺＥの方へ押してください。
アラーム音は止まり、約５分後に再び鳴りだします。
約40分間はこの操作をくり返すことができます。

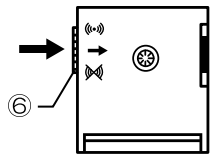

［アラームを止めても、数分後に再び鳴りだす機能のことをスヌーズ機能といいます。寝すごし防止にご利用ください。］

B. 完全に止めたいとき
スヌーズボタン⑥を (((•))) に合わせてください。

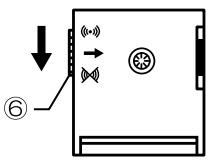

製品仕様

●精　　度：平均月差±20秒
（気温５℃から35℃で使用した場合）
●使用温度範囲：－10℃～＋50℃
●使 用 電 池：コイン型リチウム電池　1個
SEIKO SB-T14（電池上の表示 CR2025）
●アラーム精度：－10分～＋5分
●電 池 寿 命：約7年
（1日1回アラームを30秒間使用した場合）

*上記の製品仕様は、改良のため予告なく変更する場合があります。

電池について

⚠警告

<コイン型リチウム電池について>

(1)充電、ショート、分解、変形、加熱、火に入れるなどしないでください。
この電池は、リチウム、有機溶媒など可燃性物質を内蔵しており、発火、発熱、破裂の原因となります。

(2)電池は幼児の手の届かない所に置いてください。
万一飲み込んだ場合には、直ちに医師と相談してください。

(3)電池を廃棄する場合および保存する場合には、テープなどで絶縁してください。
他の金属や電池とまじると、発火、破裂の原因となります。

⚠注意

<電池について>

下記のことを必ず守ってください。電池の使い方を間違えますと液もれや破裂のおそれがあり、機器の故障やけがなどの原因となります。

(1)⊕⊖を正しく入れてください。
(2)製品仕様の電池寿命を経過した場合は、時計がまだ動いていてもすべて指定の新電池と交換してください。
また、時計を使わないときは電池をすべてはずしてください。電池の一部の交換や、電池を入れたままにしておくと、他の部分の止まりや古い電池からの液漏れ等で時計や、周囲の物を汚したり、傷めたりする恐れがあります。
(3)充電式ではないので充電すると液もれ、破損のおそれがあります。
(4)電池に直接ハンダ付けしたり、水滴をつけないでください。
(5)直射日光・高温・高湿の場所を避けて保管してください。また使用済みの電池は、速やかに処分または幼児の手の届かないところに保管してください。
(6)時計が動かない等の場合、電池端子が汚れている場合があります。やわらかい布などでクリ-ニングしてください。
(7)添付の電池は工場出荷時より付けられています。時計の電池寿命は製品仕様の表示より短いことがあります。

SEIKO

目ざまし時計

取扱説明書

このたびはセイコークロック商品をお買い上げいただき、ありがとうございました。
ご使用の前にこの取扱説明書をよくお読みの上、正しくご愛用くださいますようお願い申し上げます。なお、この取扱説明書はお手元に保存し、必要に応じてご覧ください。

発売元
セイコークロック株式会社

Ⓣ　　説明書番号　FUH-003J

保証・アフターサービス

●この時計はメーカー保証です。
保証の内容については別添の保証書をご覧ください。
尚、保証書は日本国内のみ有効です。
また、アフターサービスも海外ではできません。
●保証期間中の保証規定に基づいた修理品は、お買い上げ店がお預かりし、メーカーが無料で修理いたします。必ず保証書を添えてご依頼ください。
●保証期間中でも無料修理の対象とならない修理品および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
●この時計の修理用部品は、3年間保有しています。この期間は原則として修理が可能です。修理用部品とは製品の機能を維持するために不可欠な時計本体の部品です。修理の可能な期間は、ご使用条件により異なります。
また修理可能な場合でも元通りの精度にならない場合があります。お買い上げ店とよくご相談ください。
●修理のとき、部品・その他の付属品は、一部代替部品を使用させていただくこともありますので、ご了承ください。
●保証期間外、もしくは無料修理の対象とならない修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃、諸掛り費用をお客様にご負担いただきます。
代金が標準小売価格を上回る場合があります。
●保証期間中・経過後とも、修理品はお客様がお買い上げ店にお持込みいただきます。修理を依頼されるときはお買い上げ店にご持参ください。
●ご不明の点は下記お客様センターにお問い合わせください。

この取扱説明書の内容は、予告なしに変わることがあります。
印刷による制限のため、この取扱説明書中の図が、実際の表示と異なる場合があります。
この時計によって生じたいかなる支出、損益、その他の損失に対してなんら責任を負いません。
この取扱説明書を製造者の許可なくして変更・複製することを禁じます。

本製品、ならびにアフターサービスなどにつきましてご不明なことがございましたら、製品本体の裏面または底面に表示してあります製品番号(品番)をご確認のうえ、セイコークロック(株)お客様センターにお問い合わせください。
（例：AMOOO、PWOOO、KROOOなど）

フリーダイヤル
お客様センター　0120-315-474
http://www.seiko-clock.co.jp

使用場所・お手入れ方法

■使用場所

つぎのような所では、使わないでください。

●温度が－10℃（氷点下10度）以下になる所
●温度が＋50℃（50度）以上になる所
例えば、直射日光が当たる所、暖房器具などの熱風や熱が当たる所、そのほか火気に近い所
●浴室など湿気の多い所
●強い磁気や振動がある所

■お手入れ方法

日常の手入れの仕方

●枠をふくときは、湿ったやわらかい布でふいてください。
●よごれがひどいときは、水でうすめた中性洗剤を少量、やわらかい布につけてふき、ふいた後で乾ぶきしてください。
●ベンジン、シンナー、ミガキ粉、各種ブラシなどは使わないでください。
●殺虫剤、ヘアスプレーなどもかからないようにしてください。

HOW TO USE

(While the design of the clock differs depending on the model, the method of operation is the same.)

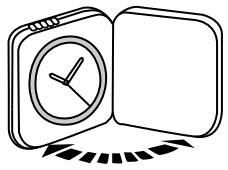

1. To start the clock

A. Pull the battery holder ① on the rear of the clock in the direction of "OPEN➡" to remove it.
B. Remove the insulator ②, and then, re-install the battery holding its side face with the ⊕ side up.
C. Set the battery holder ① and push it until it clicks.
The clock starts operating.

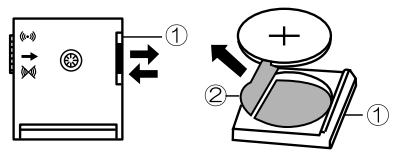

2. To set the time

Turn the hand setting knob ③ with fingers to set the hands to the desired time.

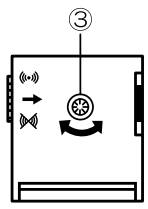

3. To set the alarm time

Turn the alarm setting bezel ④ counterclockwise to set the alarm mark ⑤ to the desired alarm time.

※Design of the alarm mark may differ according to the model.

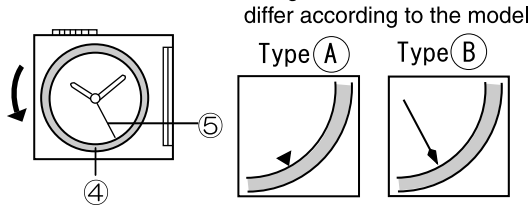

(Otherwise,the alarm may start ringing before the designated time.)

4. Engagement/disengagement of the alarm

To ring the alarm

Slide up the snooze button ⑥.
The alarm will ring at the designated time.

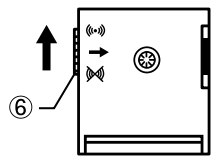

・Due to the mechanism of the clock, the alarm starts ringing during the time period between 10 minutes before and 5 minutes after the designated time.
(For example, if the alarm is set to 7:00, it will start ringing between 6:50 and 7:05.)

To stop the alarm

To stop the alarm, follow either of the two procedures below:

A. To stop the alarm and ring it again after about 5 minutes.
Push the snooze button ⑥ in the direction of " ➡ SNOOZE".
The alarm stops ringing and rings again in about 5 minutes.
This function can be used repeatedly up to 40 minutes after the designated time.

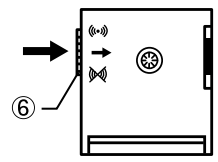

(The snooze function starts the alarm again in a few minutes after it is stopped.
The snooze function is useful for preventing oversleep.)

B. To stop and disengage the alarm.
Slide down the snooze button ⑥.

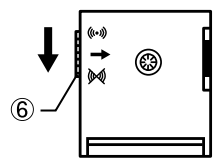

SPECIFICATIONS

・Loss/gain(monthly rate):Less than 20 seconds at normal temperature range (+5℃～+35℃)
・Operational temperature range:-10℃～+50℃
・Battery: Lithium battery CR2025 (SEIKO SB-T14) 1 pc.
・Accuracy of the alarm: -10minutes ～ +5 minutes
・Battery life:Approx. 7 years

*The above specifications are subject to change without prior notice, for product improvement.

GUARANTEE AND AFTER-SALES SERVICING

・This clock is guaranteed by the manufacturer.
The content of guarantee is described in the certificate of guarantee attached to the clock.
・The guarantee and after-sales servicing are valid only in Japan
・If the clock requires service under guarantee within the guarantee period, take it to the retailer from whom your clock was purchased, together with the certificate of guarantee. The clock will be sent to SEIKO, where repair and adjustment are made without charge.
・Even if the repair is not covered by the guarantee, or even if the guarantee period expires, your clock will be repaired at cost at your request.
・SEIKO makes it a policy to usually keep a stock of spare parts for its clocks for 3 years. In principle, your clock can be reconditioned within this period if used normally. Replacement parts are those which are essential to maintaining the functional integrity of the clock. The number of years that a clock is considered repairable may vary greatly depending on the conditions under which it was used, and normal accuracy may not be achieved in some cases. We recommend, therefore, that you consult the retailer from whom the clock was purchased when having them repair your clock.
・The clock parts or accessories may be replaced with substitutes if the originals are not available.
・To obtain the service, take your clock to the retailer from whom it was purchased, irrespective of whether the guarantee is valid or not.

NOTES ON THE BATTERY

⚠ WARNING

(1) Do not recharge, short-circuit, tamper with or deform the battery, or do not expose it to fire. Otherwise, it may catch fire, generate intense heat or explode as it contains inflammable materials such as lithium and organic solvent.
(2) Keep the battery out of the reach of children. If a child swallows it, consult a doctor immediately.
(3) When disposing of the battery or keeping it for future use, insulate it with a tape, etc. If the battery is not insulated and brought into contact with metals or other batteries, it may catch fire or explode.

⚠ CAUTION

Be sure to observe the following. Otherwise, battery leakage may result or the battery may explode, causing a malfunction of the clock or injuries to you.
(1) When installing the battery, check that the **(+)** and **(-)** sides are properly positioned.
(2) For battery replacement, request the batteries for exclusive use with the SEIKO clocks, and be sure to have all the batteries replaced with new ones at a time.
(3) The battery is not rechargeable, and do not recharge it. Otherwise, battery leakage or damage to the battery may result.
(4) Do not apply solder to the battery.
(5) Do not keep the clock in a place where it is exposed to direct sunlight, extremely high temperatures, or high humidity.
(6) If the clock stops operating or if you will not use it for a long time, remove the battery from the clock.
(7) The battery in your clock may run down in less than the specified period after the date of purchase, as it is a monitor battery which is inserted at the factory to check the function and performance of the clock.

PLACE OF USE AND CARE OF YOUR CLOCK

■Place of use
Do not use the clock under the following conditions.
・In a temperature below -10℃.
・In a temperature over +50℃.
For example, under direct sunlight, near a heater or fire.
・Humid places such as bathroom.
・Places where the clock is exposed to strong magnetism or vibration.

■Care of your clock
Daily care
・When wiping the frame of the clock, use a soft, moisturized cloth.
・If the clock is heavily stained, wipe it with a soft cloth soaked with a diluted water solution of neutral detergent and then wipe it with a dry cloth again.
・Do not use benzine, thinner, polishing powder or brushes to clean the clock.
・Be careful not to expose the clock to insecticide or cosmetic spray.